

# MS 2945 INSTRUCTIONS

---



Mesrutiyet caddesi. Hatay Sokak. 17/B  
06640. Kızılay / Ankara  
Turkey

Tel : +90 312 417 72 75  
Fax : +90 312 425 72 81  
Web : [www.oliser.com.tr](http://www.oliser.com.tr)  
Email : [oliser@oliser.com.tr](mailto:oliser@oliser.com.tr)

## PREPARATION

Place an Ink supply bottle to the back of the machine and insert the ink supply tube into the bottle.

Plug in the plug and the machine will be ready to start filling .

Now, The machine is ready to fill the cartridges. Before filling the cartridges, be sure that they are empty. If not, evacuate the remaining ink from cartridge.

This machine is designed to only fill FRESH CARTRIDGES (you can also fill non-fresh cartridges using a steam generator before filling)

**Strictly recommended :** Before filling the cartridges we recommend you to clean the printheads of the cartridges by a steam generator. It will help you to fill the cartridges easily and will open the all clogged or dried printheads, So, your success rate will increase



## 26/29/14 FILLING




Mode Switch

Place the cartridge in to the 26/29/14 filling station.



Flip the mode switch to 26/29/14 filling position.

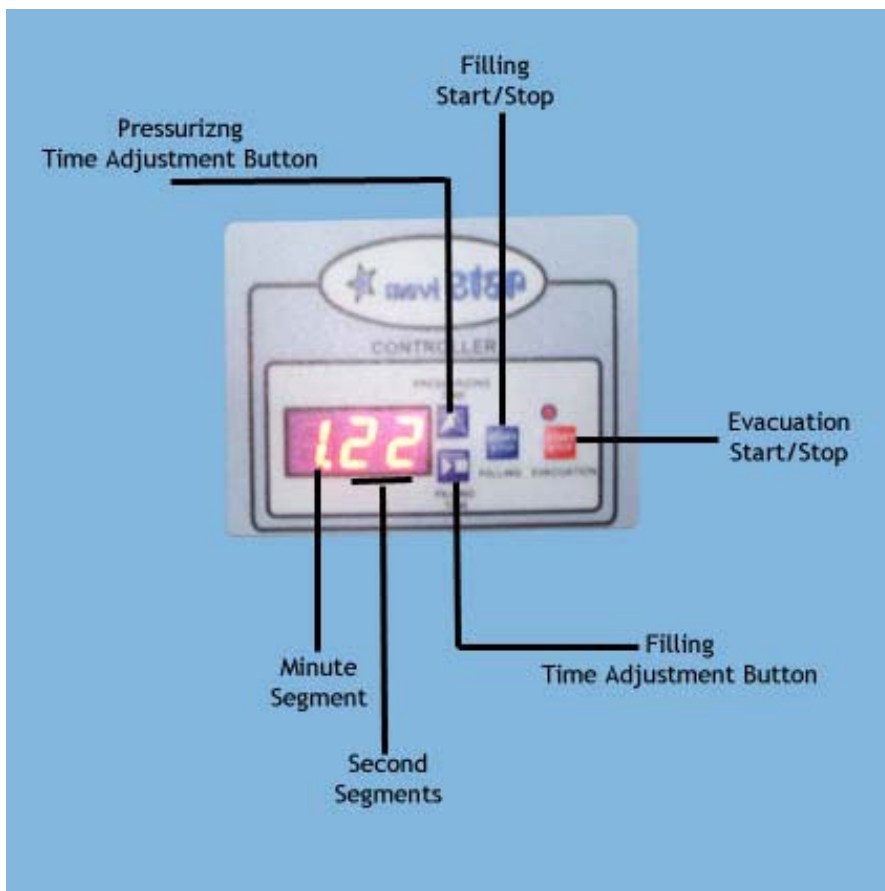

Adjust the timer around 2.20(2minutes,20seconds) and pressurizing 9seconds. Push to the filling button to start filling process.

**Note :** If necessary adjust the filling preiod for the different filling volumes.

**Note:** Evacuation Start/Stop button is disabled in MS-29/45 model.

**To Order Call: +90 312 417 72 75**


## 15/45 FILLING



Place the cartridge in to the 15/45 filling station.



Flip the mode switch to 15/45 filling position.

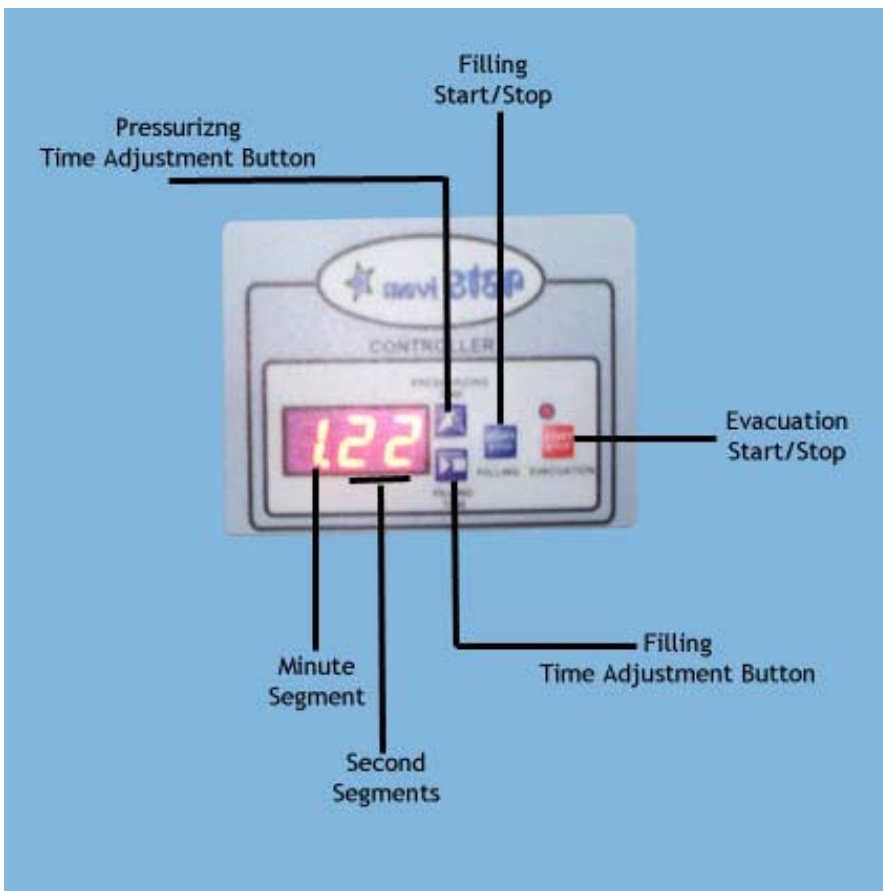

Adjust the timer around 2.20(2minutes,20seconds) and pressurizing 9seconds.  
Push to the filling button to start filling process.

**Note :** If necessary adjust the filling period for the different filling volumes.

**Note:** Evacuation Start/Stop button is disabled in MS-29/45 model.

# TUBE REPLACEMENT OF MOTORS

