

# MS AUTO-TAPE INSTRUCTIONS

---



oliser

Mesrutiyet caddesi. Hatay Sokak. 17/B  
06640. Kızılay / Ankara  
Turkey

**Tel :** +90 312 417 72 75

**Fax :** +90 312 425 72 81

**Web :** [www.oliser.com.tr](http://www.oliser.com.tr)

**Email :** [oliser@oliser.com.tr](mailto:oliser@oliser.com.tr)


## PREPERATION

1. Plug the mains supply plug , head sealer will start heating, before starting sealing wait at least 30 minutes to reach correct temprature of heating element.
2. Never touch the tape cutter and heated head.
3. Suggestion: Please drip 3-4 drops pure water on printheads of all black and color cartridges before sealing.Pure water will help sealing better and start up of cartridges before use.


### **IMPORTANT:**

TO BE SUCESSFULL , BEFORE SEALING THE CARTRIDGES, YOU NEED TO CLEAN THE PRINT HEADS USING CLEANING SOLUTION PERFECTLY USE A FEW DROPS CLEANING SOLUTION ON THE WHOLE SURFACE OF PRINTHEAD AND WIPE IT BY A TISSUE PAPER SOFTLY.



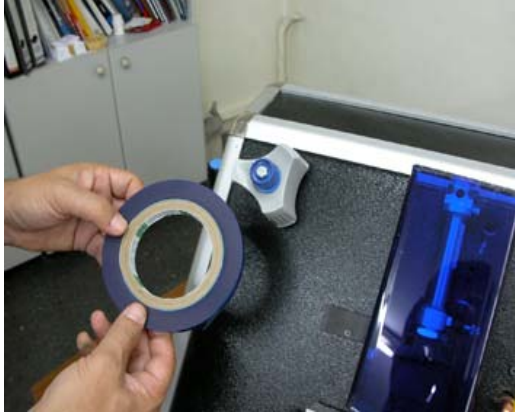

Install a Roll of sealing tape onto the spindle (grey / white, wheel). This should be blue, non adhesive static sealing tape. **We recommend 13mm width**

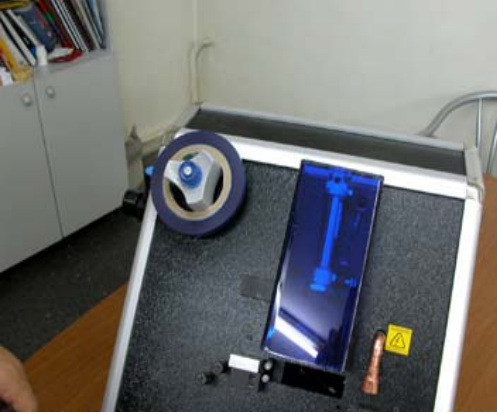


Control the tightness of the blue tape.



Then feed it round the two black roller wheels / guides then through the feeder slot near **Perspex** cabinet and pull across unit to other side...



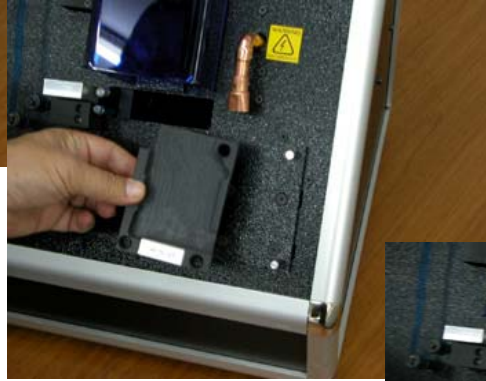

You will notice that there are 8 cradles clearly marked in white etching for use with different cartridges  
Select the desired cradle and place into unit on the 3 x securing pins  
Get your ink cartridge and ensure that it is



Place cartridge in cradle  
Holding loose end of blue tape in your hand to the one side of the cartridge, push the green button

This will activate the piston shaft to come forward and seal the cartridge  
The shaft will automatically withdraw after it has sealed the tape to nozzles





**COMPRESSED AIR IN... (6mm hose)**